

NOBLE | BREEZEWAY WALL PANEL INSTALLATION INSTRUCTIONS

PRECAUTIONS

Always wear work gloves and safety glasses when cutting product.



View our installation video before getting started:
www.finium.ca

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.


**This is a glue AND nail installation.
Do not install over material other than gypse or plywood.**

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.


FIRST, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

STEP 1: Slats


A On back of panel, apply a line of 100% polyurethane glue 1/2" (1.3 cm) from all edges and forming an X in the centre.

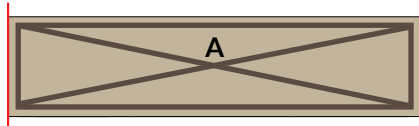

STEP 2: First make sure that plywood lips face up and to the right. Position first panel horizontally at wall lower left. Make sure each wall panel and each row is level.

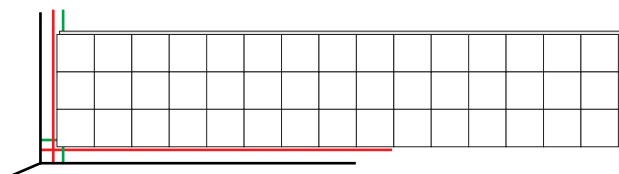


STEP 3: Nail panel in place with #23 nails on lips and two bottom rows in between wood slats. NEVER NAIL DIRECTLY ON FACE OF WALL PANEL.

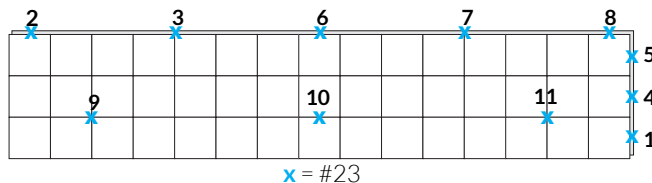

STEP 4: Installation of subsequent panels

- Repeat gluing step.
- Align panel B against panel A.
- Repeat nailing step.

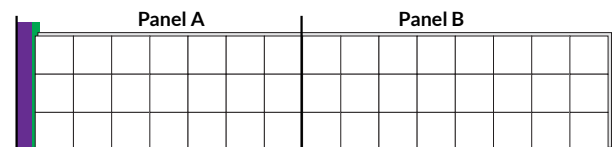

STEP 5: End a row

Before installing last panel in row, measure from top row of panel already installed to where installation is to be completed. The remaining section of panel will serve as first panel in next row.

STEP 6: Start a new row

Use remaining piece from previous row if available. Repeat steps 1, 2 and 3.

STEP 7: Last row

Cut panels of last row lengthwise to fit available space.

NOTE: If wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Finium guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%. Failure to comply with installation instructions shall void the application of the Warranty.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.

